


Cabinet Assembly Instructions

1. Install door knob using 1/4" bolt as shown.
2. Install bottom plate A to underneath side of top B using 2 ea. #8-32 x 1 3/8" long screws, nuts & 1" long spacers.
3. Install top B to base cabinet using (4) 1/4-20 carriage bolts & nuts as shown.
4. Remove the (4) existing rubber feet from bottom of machine. Secure machine to top B using (4) ea. #10-32 x 1 1/4" bolts, nuts & 5/8" long spacers. Be sure to put the 5/8" long spacers between the bottom of the machine and top B.

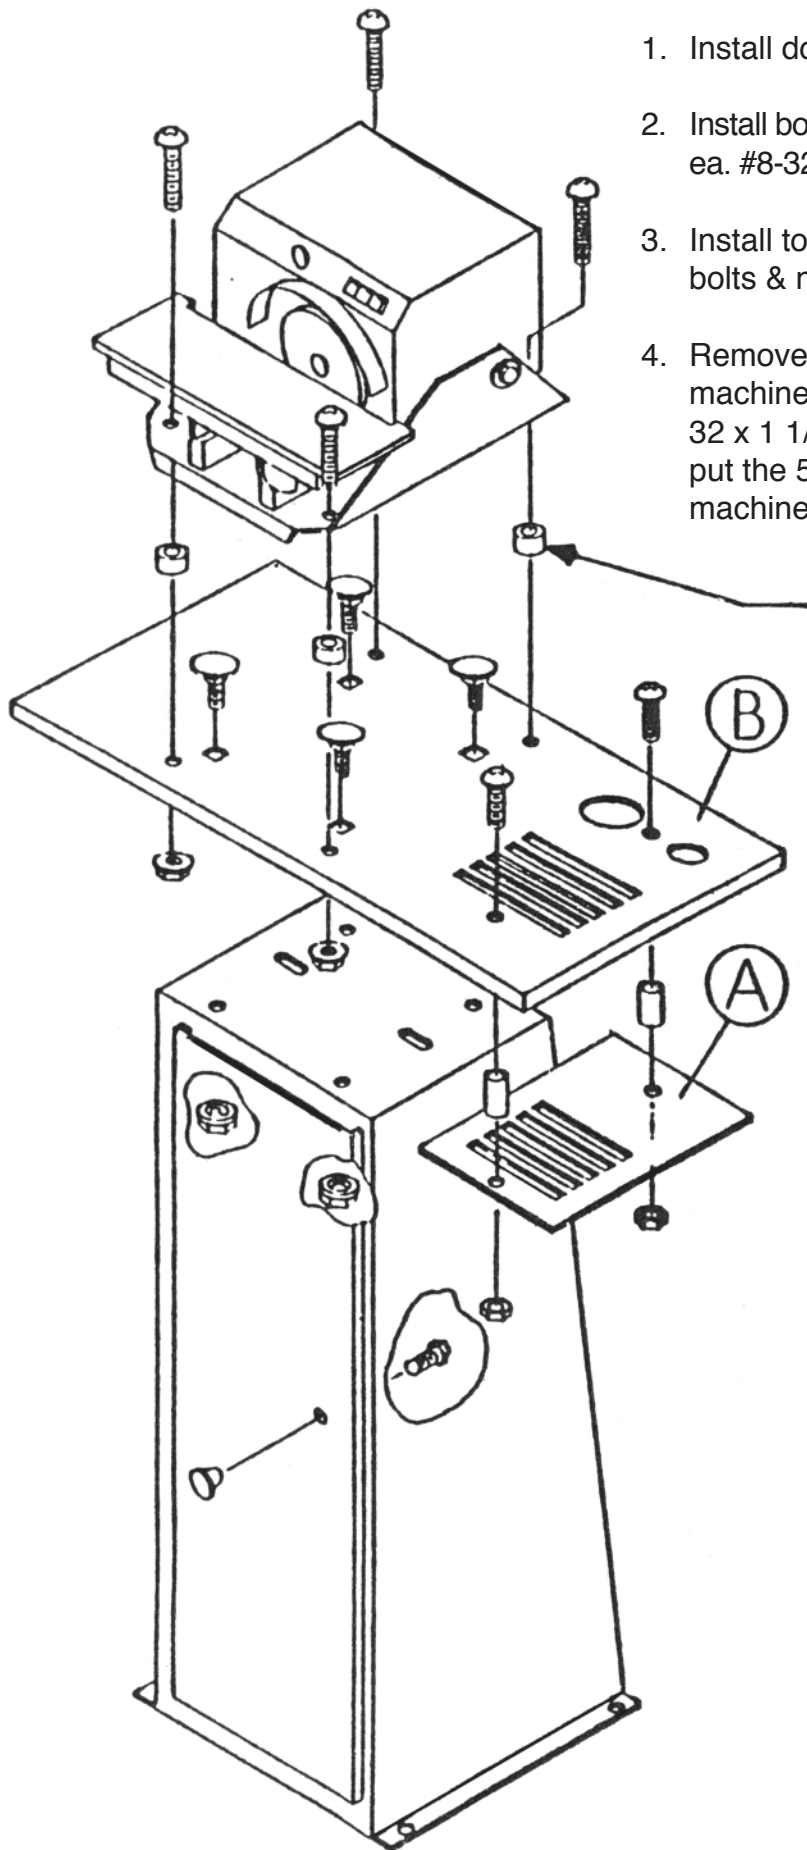

5/8" long spacers go between cabinet and top and bottom of machine. Remove existing rubber feet first.

GRS

900 Overlander Road
P.O. Box 1153
Emporia, KS 66801 USA
Toll-Free: 1-800-835-3519
Phone: 620-343-1084
Fax: 620-343-9640
E-mail: grs@grstools.com
www.grstools.com